

Station Program Menu

Main Menu	Sub Menu	Sub Menu-2	Selection	Remark
[1] RING	[1] TYPE		1,2,3,4	DKTU
	[2] ANSWER MODE		H(1)/T(2)/P(3)	
[2] COS	[1] COS DOWN		ICM/COS7	
	[2] COS RESTORE		ENTER AUTHO CODE	
	[3] WALKING COS		ENTER AUTHO CODE	
[3] AUTHORIZATION	[1] AUTH REGISTER			
	[2] AUTH CHANGE			
[4] TIME	[1] SET WAKE UP TIME		ONCE/PERMANENT	
	[2] WAKE UP DISABLE			
[5] MESSAGE	[1] SET PRESELECTED MSG		00 – 10	
	[2] SET CUSTOM MSG		None	
[6] ANNOUNCEMENT	[1] RECORD USER GREETING			
	[2] LISTEN TIME / DATE			
	[3] LISTEN STA NUMBER			
	[4] LISTEN STA STATUS			
	[5] RECORD PAGE MSG			
	[6] ERASE USER GREETING			
	[7] ERASE PAGE MSG			
[7] SUPPLEMENTARY	[1] LCD DISPLAY LANGUAGE		DOMESTIC/ENGLISH	DKTU
	[2] MPB VERSION DISPLAY			
	[3] BGM			
	[4] REGISTER STA NAME			2/8 FLEX/SLT
	[5] SPK/HEADSET		SPEAKER/HEADSET	
	[6] HEADSET RING MODE		SPEAKER/HEADSET/ BOTH	
	[7] WTU STA NUM RCVR			
	[8] SERIAL NUMBER			
[0] ATTENDANT				ATD ONLY
[*] SYSTEM	[#] ENTER ADMIN			ADMIN ONLY

Flexible Button Programming Code

NUMBER	ITEM	REMARK
11	Differential Ring	
21	Station COS Down	
22	Station COS Restore	
23	Walking COS	
31	Authorization Code Registration	
32	Authorization Code Change	
41	Wake-up Time Registration (One-time /Continuous)	
42	Wake-up Time Cancel	
51	Pre-selected MSG Activation	
52	Set Custom Message	
53	CLIR Key	
54	Two Way Recording	
55	Attendant DND	Networking Only
56	Attendant Camp On(Queue) BTN Assignment	Attendant
61	Record VMIB User Greeting	
64	Listen VMIB Station Status	
66	Erase VMIB User Greeting	
71	LCD Display Mode (English/Domestic Language)	
73	Background Music	
74	Station User Name Registration	
75	Headset/Speakerphone Mode	
76	Headset Ring Mode	
80	Account Code Activation	
81	DID Call Wait	
83	[ICM Hold] BTN Assignment	
84	[LOOP] BTN Assignment	
85	[Camp-on] BTN Assignment	
86	[INTRUSION] BTN Assignment	System Attendant
87	[UCD DND] BTN Assignment	+ Hunt Grp No.
89	Keypad Facility Key	
8*	{ACD STATUS} BTN Assignment	
91	[CONF] BTN Assignment	2/8 BTN Keypad
92	[CALLBK] BTN Assignment	2/8 BTN Keypad
93	[DND/FWD] BTN Assignment	2/8 BTN Keypad
94	[FLASH] BTN Assignment	2/8 BTN Keypad
95	[MUTE] BTN Assignment	2/8 BTN Keypad
96	[MON] BTN Assignment	2/8 BTN Keypad
97	[REDIAL] BTN Assignment	2/8 BTN Keypad

NUMBERING PLAN

5.1.1 Flexible Numbering Plan

The following numbering plan can be changed by ADMIN Programming 104-107 depending on the user's needs.

NUMBER			ITEM	REMARK
LDK-300	LDK-300E	ARIA 130		
100 – 399	1000-1599	100-227	Intercom Call	
	*620 – *667	*620-*634	Group Pilot Number	
	*501 – *535	*501-*515	Internal Page Zone	
	*543	*543	Internal All Call Page	
	*544	*544	Meet Me Page	
	*545	*545	External Page Zone 1	
	*546	*546	External Page Zone 2	
	*547	*547	External Page Zone 3	
	*548	*548	External All Call Page	
	*549	*549	All Call Page (Int & Ext)	
	*550	*550	SMDR Account Code Enter	SLT
	*551	*551	Flash Command to CO Line	SLT
	*552	*552	Last Number Redial	SLT
	*553	*553	DND (Toggle On/Off)	SLT
	*554	*554	Call Forward	SLT
	*555	*555	Speed Dial Programming	SLT
	*556	*556	Message Wait/Callback Enable	SLT
	*557	*557	Message Wait/Callback Return	SLT
	*558	*558	Speed Dial Access	SLT
	*559	*559	Cancel DND/FWD/Pre-MSG	SLT
	*560	*560	System Hold	SLT
	*563	*563	Programming Mode Enter Code	SLT
	*564	*564	ACD Reroute	
	*565	*565	Alarm Reset	
	*566	*566	Group Call Pickup	
	*568	*568	UCD DND	
	*601 - *619	*601-*610	Call Parking Locations	
	*7	*7	Direct Call Pickup	

NUMBER		ITEM	REMARK
ARIA 300	ARIA 130		
8#xxx	8#xx	Retrieve Held Individual CO Line	
9	9	Access CO Line In the 1st available CO Line Group	
0	0	Attendant Call	
#*1	#*1	1st Door Open	
#*2	#*2	2nd Door Open	
#*3	#*3	3rd Door Open	
#*4	#*4	4th Door Open	
#*5	#*5	5th Door Open	
#*6	#*6	6th Door Open	
#*7	N/A	7th Door Open	ARIA 300 Only

- To enter user programming mode, press the **[TRANS/PGM]** button in a keyset or dial *5 6 3 (Programming enter code) in a SLT.
- The following numbering plan is fixed, so it cannot be changed by ADMIN Programming.